


# SAMSUNG A208

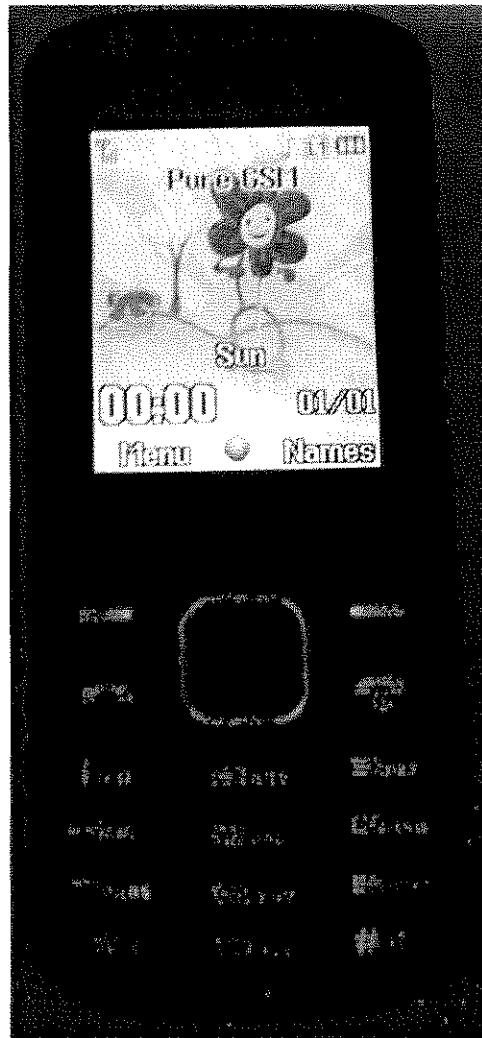

THIS GUIDE WILL HELP YOU UNDERSTAND YOUR NEW MOBILE PHONE. IT WILL PROVIDE YOU WITH USEFUL EXPLANATIONS OF FEATURES ON YOUR PHONE. SOME OF THE CONTENTS MAY DIFFER SLIGHTLY FROM YOUR PHONE DEPENDING ON THE SOFTWARE TYPE OF YOUR PHONE OR YOUR SERVICE PROVIDER.

## ***SECTION 1: SAFETY INFORMATION***

THIS SECTION OUTLINES THE SAFETY PRECAUTIONS ASSOCIATED WITH USING YOUR PHONE. THESE SAFETY PRECAUTIONS SHOULD BE FOLLOWED TO SAFELY USE YOUR PHONE.

### **ROAD SAFETY**

YOUR WIRELESS PHONE GIVES YOU THE POWERFUL ABILITY TO COMMUNICATE BY VOICE, ALMOST ANYWHERE, ANYTIME. BUT AN IMPORTANT RESPONSIBILITY ACCOMPANIES THE BENEFITS OF YOUR WIRELESS PHONE, ONE THAT EVERY USER MUST UPHOLD. WHEN DRIVING A CAR, DRIVING IS YOUR FIRST RESPONSIBILITY. WHEN USING YOUR WIRELESS PHONE BEHIND THE WHEEL OF A CAR, ABIDE BY LOCAL LAWS AND REGULATIONS, PRACTICE GOOD COMMON SENSE AND REMEMBER THE FOLLOWING TIPS:

1. GET TO KNOW YOUR WIRELESS PHONE AND FEATURES, SUCH AS SPEED DIAL AND REDIAL. IF AVAILABLE, THESE FEATURES HELP YOU TO PLACE YOUR CALL WITHOUT TAKING YOUR EYES OFF THE ROAD.
2. WHEN AVAILABLE, USE HANDS FREE DEVICE. IF POSSIBLE, ADD AN ADDITIONAL LAYER OF CONVENIENCE AND SAFETY TO YOUR WIRELESS PHONE WITH ONE OF MANY HANDS FREE ACCESSORIES AVAILABLE TODAY.
3. POSITION YOUR WIRELESS PHONE WITHIN EASY REACH. BE ABLE TO ACCESS YOUR WIRELESS PHONE WITHOUT REMOVING YOUR EYES FROM THE ROAD, IF YOU GET AN INCOMING CALL AT AN INCONVENIENT TIME, LET YOUR VOICE MAIL ANSWER IT FOR YOU.
4. LET THE PERSON YOU ARE SPEAKING WITH KNOW YOU ARE DRIVING. IF NECESSARY; SUSPEND THE CALL IN HEAVY TRAFFIC OR HAZARDOUS WEATHER CONDITIONS. RAIN, SLEET, SNOW, ICE AND EVEN HEAVY TRAFFIC CAN BE HAZARDOUS.
5. DO NOT TAKE NOTES OR LOOK UP PHONE NUMBERS WHILE OPERATING A MOTOR VEHICLE.

## ***SECTION 2: UNDERSTANDING YOUR PHONE***

THIS SECTION OUTLINES SOME KEY FEATURES OF YOUR PHONE. IT ALSO DISPLAYS THE SCREEN AND THE ICONS THAT ARE DISPLAYED WHEN THE PHONE IS IN USE.

### **INSTALLING THE SIM CARD**

IMPORTANT: THE SIM CARD AND ITS CONTACTS CAN BE EASILY DAMAGED BY SCRATCHES OR BENDING. USE CAUTION WHEN INSERTING OR REMOVING THE CARD AND KEEP ALL SIM CARDS OUT OF REACH OF CHILDREN. MAKE SURE THE GOLD CONTACTS OF THE SIM CARD FACE DOWN INTO THE PHONE AND THE NOTCH IS ALIGNED, AS YOU SLIDE THE SIM CARD INTO SOCKET.

### **BATTERY INSTALLATIONS**

1. IF YOUR PHONE IS TURNED ON, POWER OFF THE PHONE BY HOLDING DOWN THE KEY UNTIL THE POWER-OFF IMAGE DISPLAYS.
2. REMOVE THE BATTERY BY PRESSING DOWN AND SLIDING THE BATTERY COVER AWAY.
3. LIFT THE BOTTOM OF THE BATTERY AND THEN LIFT IT UP AND AWAY.

## **CHARGING THE BATTERY**

1. CONNECT THE CHARGER WITH THE POWER SUPPLY.
2. CONNECT THE CHARGER WITH THE PHONE.
3. THE BATTERY INDICATIONS LIGHT WILL BLINK WHEN PHONE IS CHARGING. IF THE HANDSET IS POWERED OFF WHEN IT'S CHARGING, LCD WILL DISPLAY A CHARGING INDICATION
4. WHEN THE BATTERY IS FULL, INDICATION WILL STOP BLINKING. IF THE POWER IS OFF, INDICATION ON LCD WILL SHOW COMPLETD.
5. BATTERY, PHONE AND CHARGER MAY GET WARM DURING CHARGING.
6. PLEASE DISCONNECT THE HANDSET AND CHARGER WHEN CHARGING IS COMPLETE.
7. YOU MAY USE THE HANDSET WHILE IT'S CHARGING.

## ***SECTION 3: OPERATION***

POWER ON/OFF

POWER ON: HOLD DOWN THE POWER KEY TO TURN ON THE HANDSET

IF THERE IS A PROMPT TO "INSERT SIM", PLEASE POWER IT OFF AND CHECK THE SIM CARD LOCATED UNDER THE BATTERY.

POWER OFF: HOLD DOWN THE POWER KEY TO TURN OFF HANDSET. THE HANDSET IS OFF AFTER THE LCD QUILTS FLASHING. WHEN THE HANDSET IS POWERED ON AND REQUESTS THE PASSWORD OR PIN CODE YOU HAVE TO INPUT CORRECTLY. IF YOU DO NOT KNOW THE PIN/PASSWORD YET, PLEASE CONTACT THE NETWORK SUPPLIER.

## **EMERGENCY CALLS**

IF THE HANDSET IS UNDER NETWORK COVERAGE, YOU CAN MAKE EMERGENCY CALLS ANYWHERE WITHIN THE GSM NETWORK. IF YOU HAVE NO SERVICE OR THE SIM CARD IN THE HANDSET IS NOT ACTIVATED, LCD WILL DISPLAY "EMERGENCY CALLS ONLY"

## ***SECTION 4: CONTACTS***

CONTACTS: YOU CAN VIEW YOUR CONTACTS LIST.

ADD NEW CONTACT: YOU CAN ADD NEW CONTACT TO THE SIM OR THE HANDSET.

DELETE ALL: YOU CAN DELETE ALL CONTACT RECORDS ON THE SIM OR THE HANDSET.

COPY ALL: YOU CAN COPY ALL CONTACTS FROM THE SIM TO HANDSET OR VICE VERSA.

OWNER NUMBER: YOU CAN VIEW/EDIT THE NUMBER BELONGING TO THE HANDSET.

**PREFERRED STORAGE:** YOU CAN CHOOSE TO HAVE YOUR CONTACTS AUTOMATICALLY STORED ON THE SIM OR THE HANDSET.

**MEMORY STATUS:** YOU CAN VIEW THE SIM AND THE HANDSET'S STORAGE CAPACITY.

**SPEED DIAL** YOU CAN SET A NUMBER FROM THE CONTACTS AND ASSIGN A NUMERIC NUMBER. THIS MAKES THE ASSIGNED KEY A SHORTCUT. IF SPEED DIAL IS ENABLED, LING PRESS THE ASSIGNED KEY ON STANDBY MODE AND THE NUMBER WILL BE DIALED.

## ***SECTION 5: MESSAGING***

### **CREATING AND SENDING A TEXT**

- SELECT MENU, THEN MESSAGES AND CHOOSE "WRITE MESSAGES"
- YOU CAN CHANGE INPUT TYPE BY PRESSING THE # KEY TO CHANGE ACROSS ABC, abc, AND 123
- YOU MAY SELECT "ENTER RECIPIENT" TO SELECT A RECIPIENT FROM YOUR ADDRESS BOOK OR YOU MAY SELECT YOU CALL LOG AND CHOOSE FROM A RECENTLY DIALED/RECEIVED/MISSED CALL.
- SELECT OPTIONS AND "SEND" TO SEND MESSAGES

### **ENTERING TEXT**

YOU CAN INPUT ALPHANUMERICALLY BY USING THE HANDSETS KEYPAD. THE FOLLOWING TEXT INPUT METHODS ARE AVAILABLE ON THIS HANDSET: ABC MANUAL MODE AND MANUAL MODE.

#### **ABC MANUAL MODE**

THIS MODE ALLOWS YOU TO ENTER LETTERS BY PRESSING THE KEY THAT CORRESPONDS TO THE LETTER YOU WISH TO USE. THE REQUIRED KEY SHOULD BE PRESSED ONCE, TWICE, THREE OR EVEN FOUR TIMES UNTIL THE LETTER YOU WISH TO USE IS DISPLAYED.

#### **123 MODE**

YOU CAN TYPE NUMBERS USING YOUR HANDSET BY ONE STROKE PER NUMBER. YOU CAN ALSO ADD NUMBERS WHILE REMAINING IN ANY LETTER MODE BY PRESSING AND HOLDING THE DESIRED KEY THAT CORRESPONDS TO THE NUMBER YOU ARE TRYING TO ENTER.

### **RETRIEVING VOICEMAIL**

- SELECT MENU, THEN MESSAGES, AND CHOOSE "VOICEMAIL"
- SELECT THE SOFT KEY THAT CORRESPONDS TO "CONTACT TO YOUR VOICEMAIL" IF YOU WISH TO HEAR THOSE MESSAGES

## RETRIEVING MESSAGES

- SELECT MENU, THEN MESSAGES, AND CHOOSE "INBOX"
- SCROLL TO THE MESSAGES YOU WOULD LIKE TO VIEW
- PRESS THE SOFT KEY FOR "OK" TO VIEW

## RETRIEVING SENT MESSAGES

- SELECT MENU, THEN MESSAGES, AND CHOOSE "OUTBOX"
- SCROLL TO THE MESSAGES YOU WOULD LIKE TO VIEW
- PRESS SOFT KEY FOR "OK" TO VIEW

## MESSAGE SETTINGS

THIS SECTION DISPLAYS THE MESSAGING SETTINGS STORED IN YOUR HANDSET.

## MEMORY STATUS

THIS WILL SHOW HOW MANY MESSAGES YOU HAVE STORED ON YOUR HANDSET OR SIM BASED ON THE MEMORY LEVELS OF EACH.

## BROADCAST MESSAGE

THIS ALLOWS YOU TO ENABLE OR DISABLE RECEIVING BROADCAST MESSAGES

## *SECTION 6: CALL LOG*

MISSED CALLS- THIS ALLOWS YOU TO CHOOSE ANY MISSED CALLS AND VIEW THE DETAILS SUCH AS NAME, NUMBER AND DURATION.

DIALED CALLS-THIS SECTION ALLOWS YOU TO CHOOSE AND DIALED CALLS AND VIEW THE DETAILS.

RECEIVED CALLS- THIS SECTION ALLOWS YOU TO CHOOSE ANY RECEIVED CALLS AND VIEW THE DETAILS.

ALL CALLS- THIS SECTION ALLOWS YOU TO CHOOSE ANY CALL AND VIEW THE DETAILS.

CLEAR LOGS-THIS SETTING ALLOWS YOU TO DELETE CALL RECORDS. YOU MAY CHOOSE TO DELETE INDIVIDUAL CALLS OR YOUR ENTIRE CALL LOGS.

CALL TIMERS- THIS SECTION ALLOWS YOU TO VIEW THE DURATION OF THE LAST CALL. THE DURATION OF ALL DIALED CALLS, THE DURATION OF ALLS RECEIVED CALLS. THIS SECTION ALSO ALLOWS YOU TO RESET INDIVIDUAL OR ALL CALL TIMERS.

## **SECTION 7: SETTINGS**

### **DATE AND TIME**

THIS SETTING ALLOWS YOU TO SET THE DATE AND TIME TO BE DISPLAYED ON YOUR HANDSET.

### **FORMAT**

THIS SETTING ALLOWS YOU TO SWITCH THE FORMAT OF THE TIME TO EITHER 12 OR 24 HOUR FORMAT.

### **DISPLAY**

THIS SETTING ALLOWS YOU TO SET THE WALLPAPER TO BE DISPLAYED, CHANGE THE BACKLIGHT SETTING AND CHANGE THE BRIGHTNESS SETTINGS.

## **PHONE SETTINGS**

LANGUAGE- THE SETTINGS FOR LANGUAGE REMAINS ON ENGLISH.

SHORTCUTS-THESE SETTINGS ALLOW YOU TO CHANGE THE DEDICATED KEYS. YOU CAN ASSIGN A MENU-ITEM TO THE NAVIGATIONAL KEYS.MY SHORTCUTS ARE THE DEFAULT SHORTCUT MENU.

AUTO KEYPAD LOCKS-ON/OFF THESE SETTINGS ALLOW YOU TO ENABLE OR DIABLE THE KEYPAD LOCK.

INPUT METHOD SETTINGS-THESE SETTINGS ALLOW YOU TO CHANGE THE DEFAULT INPUT METHOD.

## **CALL SETTINGS**

CALLER ID-TTHIS DISPLAY THE OPTIONS OF SHOWING CALLER ID ON THE HANDSET WHEN A CALL IS RECEIVED.

CALL WAITING- THIS OPTION ALLOWS THE USER TO ENABLE/DISABLE THE ABILITY TO RECEIVE A CALL WHILE ALREADY ON ANOTHER CALL.

CALL DIVERT- THIS OPTION ALLOWS YOU TO ENABLE/DISABLE FOWARDING OF INCOMING CALLS.

CALL BARRING-TTHIS OPTION ALLOWS YOU TO RESTRICT CERTAIN TYPES OF CALLS (INTERNATIONAL OR INCOMING).

LINE SWITCHING-TTHIS OPTION SHOWS WHAT LINE CALLS COME IN.

CALL TIME REMINDER-TTHIS OPTION SHOWS YOU THE LENGTH OF CALL TIME WHEN A CALL IS ENDED.

AUTO REDIAL-TTHIS OPTION ALLOWS YOU TO HAVE YOUR PHONE AUTO RE DIAL THE LAST DIALED NUMBER.

CLOSED USER GROUP-THIS OPTION SHOWS WHAT USER GROUPS ARE CLOSED / OPENED.

IP NUMBER- THIS OPTION DISPLAYS THE IP NUMBER OF THE PHONE.

ANSWER MODE-THIS OPTION ALLOWS YOU TO SET THE ANSWER MODE OF YOUR HANDSET.

## **NETWORK SETTINGS**

NETWORK SELECTION-THESE SETTINGS SHOW THE NETWORK YOUR PHONE HAS SELECTED BASED ON THE PROVIDER OF THE SIM CARD.

PREFERENTIAL NETWORKS- THIS OPTION ALLOWS YOU TO SET THE PREFERRED NETWORKS. THESE SHOULD NOT BE CHANGED AND ARE REQUIRED BY YOUR NETWORK PROVIDER.

## **SECURITY SETTINGS**

THE SECURITY FEATURE ENABLES YOU TO RESTRICT THE TYPES OF CALLS. VARIOUS CODES AND PASSWORDS ARE USED TO PROTECT THE FEATURE OF YOUR PHONE.

1. IN IDLE MODE, PRESS MENU-SECURITY SETTINGS-PHONE SECURITY AND PRESS THE OK SOFT KEY.
2. THE FOLLOWING OPTIONS ARE AVAILABLE.USE THE UP OR DOWN NAVIGATION KEY TO SCROLL TO AND SET OPTIONS

### **PHONE LOCK**

WHEN THE PHONE LOCK FEATURE IS ENABLED, THE PHONE IS LOCKED AND YOU MUST ENTER THE 4 TO 8 DIGIT PASSWORD EACH TIME THE PHONE IS SWITCHED ON.

THE FOLLOWING OPTIONS ARE AVAILABLE:

- OFF: YOU ARE NOT REQUIRED TO ENTER THE PHONE PASSWORD WHEN YOU SWITCH ON THE PHONE.
- ON: YOU ARE REQUIRED TO ENTER THE PHONE PASSWORD WHEN YOU SWITCH ON THE PHONE.

### **CHANGE PASSWORD**

YOU WILL BE PROMPTED TO ENTER YOUR OLD PASSWORD, YOUR NEW PASSWORD THEN CONFIRM YOUR NEW PASSWORD.REMEMBER THIS PASSWORD, BECAUSE YOU WILL BE REQUIRED TO ENTER IT WHEN YOU USE THE PHONE LOCK ON SECURITY SETTINGS.

## RESTORE FACTORY SETTINGS

1. IN IDLE MODE, PRESS MENU-SETTINGS-RESTORE FACTORY SETTINGS AND PRESS OKAY SOFT KEY. YOU WILL BE PROMPTED TO ENTER THE PASSWORD OF THE DEVICE TO RESET TO FACTORY DEFAULTS. PASSWORD IS 0000. AFTER ENTERING THE PASSWORD PRESS THE OK SOFT KEY. YOU WILL BE ASKED TO RESTORE. SELECT THE YES SOFT KEY. PHONE WILL REBOOT TO RESTORE TO FACTORY SETTINGS.

NOTE: USER DATA, SUCH AS CONTACTS, MESSAGES AND PICTURES MAY BE DELETED.

## PROFILES

THERE ARE FIVE OPERATING MODES FOR YOUR HANDSET. THESE OPERATING MODES ARE: GENERAL, SILENT, OUTDOOR, INDOOR, AND HEADSET. SELECT WHICH MODE YOU WISH TO OPERATE IN AND CLICK ACTIVATE.

### CUSTOMIZE

CUSTOMIZE PROFILES ALLOWS YOU TO SET YOUR PHONE SPECIFICALLY TO YOUR WANTS AND NEEDS.

INCOMING CALL: YOU CAN SET THE RING TONE FOR INCOMING CALLS

ALERT TYPE: THIS OPTION IS SET TO RING ONLY

RING VOLUME: CHOOSE BETWEEN VOLUME LEVELS 1-7 FOR YOUR RINGTONE.

RING TYPE: SELECT WHETHER YOU WANT YOUR RING TO REPEAT, ASCENT OR RING ONE TIME.

MESSAGE TONE: YOU CAN SET THE MESSAGE TONE FOR INCOMING MESSAGES.

KEYPAD TONE: YOU CAN SET THE KEYPAD TONE.

KEYTONE VOLUME: YOU CAN CHOOSE BETWEEN VOLUMES 1-7 FOR THE KEYTONE.

## MULTIMEDIA

**CAMERA-** THIS IS WHERE YOU GO TO TAKE PICTURES WITH YOUR HANDSET. TO CAPTURE THE IMAGE, PRESS THE LARGE MENU KEY WHEN THE CAMERA IS DISPLAYED. DEPENDING ON THE CAMERA SETTINGS AND OTHER ITEMS SAVED ON YOUR PHONE, YOUR PHONE WILL HOLD ATLEAST 70 IMAGES.

TO CHANGE THE CAMERA OPTIONS, SELECT THE LEFT SOFT KEY FOR "OPTIONS" WHILE THE CAMERA IS DISPLAYED.



## **CAMERA SETTINGS**

**STORAGE:** YOU CAN CHANGE THE STORAGE DEFAULT ON YOUR PHONE FROM PHONE TO MEMORY CARD. TO CHANGE, UNDER STORAGE SELECT THE SOFT KEY FOR "OPTIONS" AND SELECT THE LEFT SOFT KEY AGAIN FOR "CHANGE". SELECT WHICH DEFAULT STORAGE OPTION YOU WOULD LIKE FROM PHONE AND MEMORY CARD AND SELECT THE LEFT SOFT KEY OK.

**EFFECT SETTINGS:** YOU CAN CHANGE THE COLOR BALANCE PLACED ON THE IMAGE YOU CAPTURE. TO CHANGE, UNDER THE EFFECT SETTINGS SELECT THE LEFT SOFT KEY FOR OPTIONS AND SELECT THE LEFT SOFT KEY AGAIN FOR CHANGE. SELECT WHICH EFFECT YOU WOULD LIKE AND SELECT THE LEFT SOFT KEY FOR OK.

**WHITE BALANCE:** YOU CAN CHANGE THE COLOR BALANCE PLACED ON THE IMAGES YOU CAPTURE. TO CHANGE, UNDER WHITE BALANCE SELECT THE LEFT SOFT KEY FOR OPTIONS AND SELECT THE LEFT SOFT KEY AGAIN FOR CHANGE. SELECT WHICH BALANCE YOU WOULD LIKE TO AND SELECT THE LEFT SOFT KEY FOR OK.

**SCENE MODE:** YOU CAN CHANGE THE SCENE MODE PLACED ON THE IMAGES YOU CAPTURE. TO CHANGE, UNDER SCENE MODE SELECT THE LEFT SOFT KEY FOR OPTIONS AND SELECT THE LEFT SOFT KEY AGAIN FOR CHANGE. SELECT WHICH SCENE MODE YOU WOULD LIKE AND SELECT THE LEFT SOFT KEY FOR OK.

**ANTI-FLICKER:** YOU CAN CHANGE THE RATE AT WHICH YOUR IMAGE IS CAPTURED. TO CHANGE UNDER ANTI FLICKER USE THE ARROWS TO CHANGE FROM 50HZ TO 60 HZ.

## **IMAGE SETTINGS**

**IMAGE SIZE:** THIS SETTING ALLOWS YOU TO CHANGE THE DEFAULT SIZE OF THE IMAGES YOU CAPTURE. TO ALLOW MORE PICTURES TO BE SAVED, DECREASE THE SIZE OF THE IMAGES.

**IMAGE QUALITY:** THIS SETTING ALLOWS YOU TO CHANGE THE DEFAULT QUALITY OF THE IMAGES YOU CAPTURE. TO ALLOW MORE PICTURES TO BE SAVED, DECREASE THE SIZE OF THE IMAGES.

**CONTRAST:** THIS SETTING ALLOWS YOU TO CHANGE THE CONTRAST OF THE IMAGE YOU CAPTURE.

## **RESTORE DEFAULT**

THIS SETTING ALLOWS YOU TO RESTORE THE DEFAULT CAMERA SETTINGS FOR YOUR PHONE.

## **ALBUM**

THE ALBUM IS WHERE YOU VIEW YOUR IMAGES SAVED ON YOUR HANDSET.

## AUDIO PLAYER

YOU CAN PLAY,REWIND OR FAST FORWARD SONGS. TO ADD AUDIO TO YOUR HANDSET, YOU CAN USE THE AUDIO RECORDER OR YOU CAN PURCHASE A USB CABLE TO CONNECT IT TO YOUR COMPUTER. ONCE CONNECTED, THE PHONE WILL APPEAR ON YOUR COMPUTER AS ITS ON DIRECTORY. TRANSFER ANY AUDIO FILE YOU WISH TO THE PHONE DIRECTORY.

### AUDIO PLAYER OPTIONS

ALL SONGS-THIS IS WHERE YOUR SONGS ARE STORED ON YOUR HANDSET.

#### SETTINGS:

PLAY LIST- YOU CAN CHANGE THE STORAGE DEFAULT ON YOUR PHONE FROM PHONE TO MEMORY CARD.TO CHANGE, UNDER STORAGE SETTINGS. SELECT THE SOFT KEY FOR "OPTIONS" AND SELECT THE LEFT SOFT KEY AGAIN FOR "CHANGE".

LIST AUTO GEN- CHANGE FROM ON TO OFF TO EITHER HAVE A PLAYLIST AUTOMATICALLY GENERATED FROM MUSIC FILES ON YOUR HANDSET OR NOT.

REPEAT ON- ALLOWS A SONG TO REPEAT AUTOMATICALLY. TURN THID OFF TO PLAY A SONG ONCE AND THEN GO TO THE NEXT.

SHUFFLE- ON WILL SHUFFLE THROUGH YOUR SONGS RATHER THAN PLAY THEM IN ORDER. OFF WILL PLAY YOUR SONGS IN ORDER.

BACKGROUND PLAY- THIS SETTING WILL ALLOW THE MUSIC TO PLAY IN THE BACKGROUND WHILE YOU USE YOUR PHONE FOR OTHER PURPOSES.

HELP- DISPLAYS SOME HELPFUL TIPS ON HOW TO USE YOUR AUDIO PLAYER.

STOP- STOP ALL AUDIO FROM PLAYING.

SOUND RECORDER- ALLOWS YOU TO RECORD AUDIO FROM YOUR HANDSET.

## **SOUND RECORDER OPTIONS**

**RECORD-** SELECT THE LEFT SOFT KEY TO BEGIN RECORDING. YOU CAN PRESS TO PAUSE YOUR RECORDINGS OR THE RIGHT SOFT KEY TO STOP THE RECORDING. IF YOU CHOOSE TO STOP RECORDING, YOU WILL BE PROMPTED TO SAVE THE RECORDING.

**LIST-** THIS IS A LIST OF ALL THE AUDIO RECORDINGS YOU HAVE SAVED ONTO YOUR PHONE.

**PREF STORAGE-** YOU CAN CHANGE THE STORAGE DEFAULT ON YOUR PHONE FROM PHONE TO MEMORY CARD. TO CHANGE, UNDER STORAGE SETTINGS, SELECT THE LEFT SOFT KEY FOR OPTIONS AND SELECT THE LEFT SOFT KEY AGAIN FOR CHANGE. SELECT WHICH DEFAULT STORAGE OPTION YOU WOULD LIKE FROM PHONE AND MEMORY CARD AND SELECT THE LEFT SOFT KEY AGAIN FOR OK.

**FILE FORMAT-** SELECT AMR OR WAV DEPENDING ON WHAT FILE TYPE YOU PREFER

**QUALITY-** THIS SETTING ALLOWS YOU TO CHANGE THE DEFAULT QUALITY OF THE AUDIO YOU CAPTURE. TO ALLOW MORE AUDIO TO BE SAVED, DECREASE THE QUALITY OF THE AUDIO CAPTURED.

## ***ORGANIZER***

**FILE MANAGER-** SHOWS YOU HOW MUCH STORAGE MEMORY REMAINS ON YOUR PHONE.

**ALARM-** YOU CAN SET THE ALARM TIME/DATE AND TONE. YOU MAY ALSO VIEW THE STATUS OF THE ALARM, SNOOZE OR REPEAT IT.

**CALCULATOR-**THIS DEVICE CAN BE USED AS A CALCULATOR TO PERFORM SIMPLE ARITHMETIC FUNCTIONS.

**CALENDAR-**DISPLAYS A CALENDAR FOR YOU TO VIEW.

## ***SHORTCUTS***

BY CLICKING ON ANYTHING BELOW THE SHORTCUT MENU, YOU ARE TAKEN THERE DIRECTLY.

## ***SERVICE***

DISPLAYS THE SERVICE YOU ARE IN BASED ON THE SIM THAT IS INSERTED INTO YOUR HANDSET.

# ***INDEX***

## **BATTERY SECURITY**

PLEASE USE THE BATTERY APPOINTED BY THE MANUFACTURER. USING OTHER PARTS CAN MAKE SERVICE AND WARRENTY INVALID. THERE IS NO RESPONSIBILITY BY THE MANUFACTURER OR SUPPLIER FOR DAMAGED CAUSED BY USING NON-ORIGINAL PARTS. PLEASE DISCONNECT THE CHARGER FROM THE HANDSET WHEN NOT IN USE. PLEASE DO NOT ALLOW BATTERY TO COME IN CONTACT WITH METAL. PLEASE DO NOT BEND OR OPEN BATTERY. PLEASE DO NOT PUT THE BATTERY IN WATER OR FIRE.

## **USE AND MAINTENCE**

THE FOLOWING SUGGESTIONS ARE GIVEN FOR YOU TO USE AND MAINTAIN THE HANDSET:

- PUT THE HANDSET OUT OF REACH OF CHILDREN
- PLEASE KEEP THE HANDSET DRY. ANY FORM OF MOISTURE CAN DAMAGE THE CIRCUIT. IF THE HANDSET DOES GET WET, POWER IT OFF AND REMOVE BATTERY. YOU MAY ATTEMOT TO USE THE HANDSET, 24 HOURS LATER WHEN YOU CONFIRM THAT IT HAS DRIED.
- PLEASE KEEP THE HANDSET FREE AND CLEAR OF DUST OR DIRT.
- PLEASE DO NOT CLEAN WITH ANY FORM OF CHEMICALS.
- SHORTENING THE BACKLIGHT TIME WILL INCREASE BATTERY TIME.
- PLEASE DO NOT ALLOW CHARGER INTERFACE TO CONNECT TO METAL. THIS WILL CAUSE YOUR HANDSET TO BE SHORT CIRCUITED.